

# Installation of NCE29LCONVBK

## NCE29LCONVTK Installation Guide

This guide provides instructions for installing the NCE29LCONVTK (NCE 29L Convection Microwave Trim Kit).

### Package Contents

The NCE29LCONVTK is a two-piece bracket assembly consisting of the following parts:

- Top Rail (Includes 3 x M5 mounting screws)
- Facia Trim


### Tools Required

- Drill/Driver with a Phillips Head Bit
- 4 x 6g Self-Drilling Pan Head Screws (Maximum length: 15mm / User provided)
- Appropriate Screws for bottom facia mounting (User provided)

### Cabinet & Ventilation Requirements

Requirement	Specification	Notes
Internal Width	560 mm	Internal dimension
Internal Height	380 mm	Internal dimension
Internal Depth	550 mm	Internal dimension (Minimum)
Minimum Ventilation Area	252 cm <sup>2</sup>	Required for safe microwave operation and adequate airflow.

**IMPORTANT:** The total ventilation area must meet or exceed 252 cm<sup>2</sup>. This area may be achieved through one or more openings. It is recommended to install the ventilation opening high on the cabinet, as heat naturally rises.

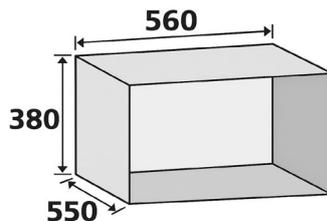

# Installation of NCE29LCONVBK

## Installation Procedure

Follow these steps precisely to complete the installation:

### Step 1: Install the Top Rail

Install the **Top Rail** into the cabinet opening, ensuring it sits **flush** with the face of the cabinet.

### Step 2: Attach the Facia Trim to the Microwave

1. Place the **Facia Trim** onto the front of the microwave.
2. Ensure the facia face is **flush** with the microwave face.
3. Using 4 x 6g self-drilling pan head screws (max 15mm), secure the facia to the microwave chassis using the provided holes on the sides of the bracket.

### Step 3: Insert the Microwave into the Cabinet

1. Feed the **240V power cord** through the cabinet to the nearest power outlet.
2. Carefully place the microwave (with the attached facia) into the cabinet opening.

### Step 4: Secure the Trim Kit

1. **Top Fastening:** Use the **3 x M5 screws** provided to fasten the top of the facia. Insert the screws through the provided holes at the top of the facia and secure them to the Top Rail installed in Step 1.
2. **Bottom Fastening:** Secure the bottom of the facia to the cabinet using **appropriate screws** (not supplied) through the three holes provided at the bottom of the facia.

Installation is now complete.

